

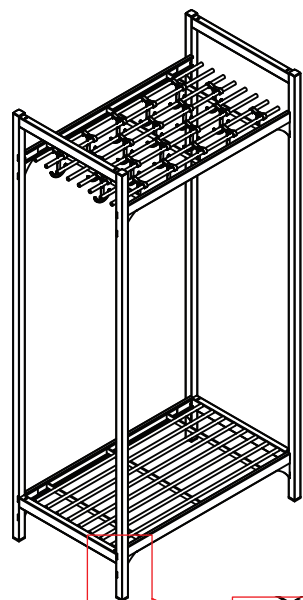


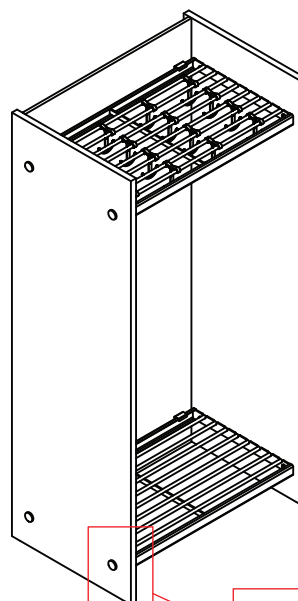



Racks with metal frame

Racks with metal frame, threads are pre-attached to the frames.

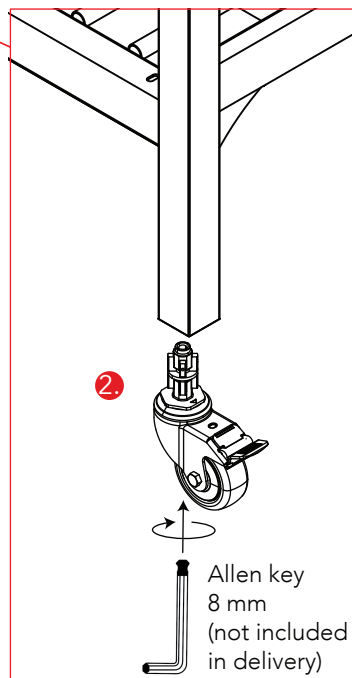


Racks with board frame

Racks with board frame, threads are pre-attached to the frames.

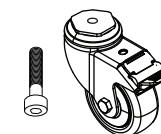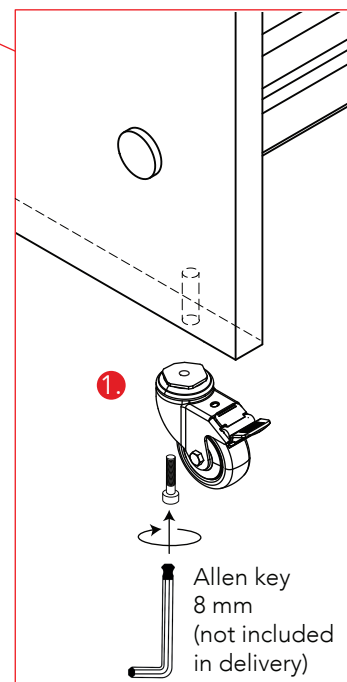

1. Castor for rack with board frame half with locks, half without

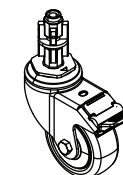

2. Castor for rack with metal frame half with locks, half without

- Castors may only be installed to 500, 550 or 600 mm wide coat rack systems
- When installing the castors make sure that the screw starts to turn on right threads and is turned all the way to the end. We recommend using 12 mm open end wrench.
- Rack must be lifted upright. The castors must be off the floor during the lift.
- After installation castors must be turned to the position showed in the picture and they must be locked
- Instructions for the maintenance and use can be found on Monena's website on a product-by-product basis.

Please ensure that this information is passed on to end user.

